



Tel: +44 (0) 1295 266277  
Fax: +44 (0) 1295 268199  
sales@msdist.co.uk  
www.msdist.co.uk

Unit G171  
Cherwell Business Village  
Southam Road  
BANBURY  
OX16 2SP UK

## Upgrade AirVision NVR to Unifi Video NVR

To remove the old AirVision software which is loaded onto the Ubiquiti NVR, and replace it with the latest UVC software:

Log into the NVR via SSH and log in using the Root User – default root/ubnt

Sudo apt-get purge airVision2

Sudo sh -c 'echo "deb [arch=amd64] http://www.ubnt.com/downloads/unifi-video/apt wheezy ubiquiti" > /etc/apt/sources.list.d/unifi-video.list'

Sudo wget -O - http://www.ubnt.com/downloads/unifi-video/apt/unifi-video.gpg.key | sudo apt-key add -

Sudo apt-get update

Sudo apt-get install unifi-video

Once this has been completed, login to controller [https://\[IP-ADDRESS\]:7443](https://[IP-ADDRESS]:7443)